

NAUTICA

ACTIVE NOISE CANCELLING BLUETOOTH STEREO HEADPHONES

H400



Thank you for purchasing an original
**Nautica Active Noise Cancelling Bluetooth
Stereo Headphones - H400**

You are getting a high quality product that's built to combine
technology and design for your everyday use.

Please read the below info carefully to get the most out of
your new product.

**This guide is ENGLISH only. For other languages and
more detailed info on care, use and warranty,
please visit technofashion.com**

WHAT'S IN THE BOX



ACTIVE NOISE CANCELLING
BLUETOOTH STEREO
HEADPHONES



 
MICRO USB
CHARGING CABLE



AUX CABLE



STORAGE POUCH




USER'S MANUAL

HOW TO USE

Short press : Increase volume
Long press : Next track

 Short press : Play/Pause
Short press : Answer/End call
Long press : Power ON/OFF
Long press : Reject call
Double click: Redial last call

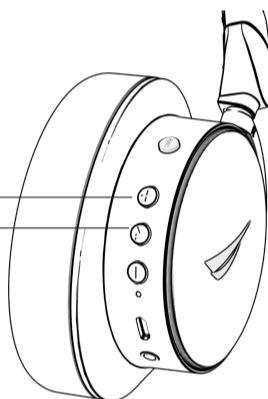


BLUETOOTH PAIRING

Keep the distance between your headphones
and mobile phone (or other devices) within 33
Ft/10 m.

Power on the headphone and it will
automatically turn to Bluetooth pairing mode.
The LED indicator will flash in blue and red.

Activate the Bluetooth function on your phone
within range and select "Nautica H400" from
the list shown.

 Reconnect Bluetooth: When powered on, the headphones will automatically
connect to the latest successfully paired device.

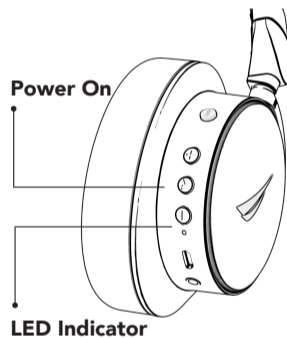

ANC (Active Noise Cancelling)

Nautica H400 headphones support ANC
(active noise cancelling). The noise reduction
effect reaches about 20 dB on Bluetooth
mode. To activate ANC feature press the ANC
button and the LED indicator will turn green.
Use this button again to turn it off.

CHARGING INSTRUCTIONS

 
For the best experience, it is recommended to
charge the unit before first use.

1. Plug the small end of the USB cable into the
micro USB charging port.
2. Plug the other end of the USB cable into a wall
charger or computer that is powered on.

Note: The headphones do not play while charging.



ANC Button

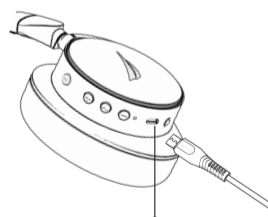

Micro USB
Charging Port

AUX MODE

Use the AUX cable to connect to a non - wireless
device.

1. Insert AUX cable into the connector on the
right earcup.
2. Insert the other end of the cable into the
connector on your device.

The LED indicator will turn green when on AUX
mode.



AUX Input

TECHNICAL SPECIFICATIONS

Bluetooth version	QCC3003 v5.0 + EDR
Bluetooth profile	A2DP, ACRCP, Hands Free Profile (HFP V1.7)
Play time	Up to 20 hours (*without ANC)
Charging time	2 hours
Standby time	200 hours
Battery capacity	500 mAh
Speaker drivers	1.57 in / 40 mm
Wireless range	Up to 33 ft / 10 m
Input voltage	3,7V

Impedance	32 Ω
Frequency response	20 Hz - 20 kHz
Sensitivity	93 dB ± 3 dB
ANC	-20 dB ± 2 dB
Sweatproof	Yes
Dustproof	Yes
Net weight	7,51 oz / 213 g
Dimensions	6.75*7.57*3.14 in / 171.5*192.4*80 mm
Charging port	microUSB

SAFETY AND MAINTENANCE

Before you use the device, read the following precautions carefully to ensure
optimal product performance.

The use of headphones will impair your ability to hear other sounds. Use caution
while using your headphones during any activity that requires your full attention.

This package contains small parts that may be hazardous to children and should
be kept out of their reach. This product is not a toy – never allow children to play
with this product.

Please do not overuse the headphones or put them under heavy pressure. Keep
away from wet and heat.

Exposing the product to extreme hot or cold, such as in a closed car in the
summer and winter conditions, will reduce the capacity and lifetime of the
product.

Headphones listening at high volume levels – especially over extended periods of
time – may damage your hearing.

Keep away from router or other high-frequency transmitting equipment to
prevent interruption of signal receiving.

Please use the headphones under working range (up to 33 ft / 10 m). The effective
range may vary depending on multiple conditions.

Power time may differ depending on personal use habits.

Do not dismantle the product. If any parts of your product require replacement for
any reason, including normal wear and tear or breakage, please contact us.

Unauthorized parties may damage the product. Do not drop, strongly vibrate, or
strike the product with hard objects to avoid damaging the internal circuit.

Do not use drastic chemicals or cleaner to clean the product. Do not use sharp
objects to scratch the product surface.

WARRANTY INFORMATION

We do our best to make sure that this product is free from defects in materials and
workmanship for a period of 1 year.

The following conditions must be met for your warranty claim to be approved:

You must have purchased the product from a Nautica or Technofashion authorized
dealer.

You must provide proof as to the date of purchase from the Nautica or
Technofashion authorized dealer.

You must have used the product only as intended and in accordance with the
product's care instructions.

Within 12 months after the purchase, in case of the product is determined to be
defective (at the date of original purchase) due to improper materials or
workmanship, you are entitled to free repair or exchange of goods. The product
should be returned to Technofashion.

The warranty does not cover defects caused by third-party modifications, repairs
or replacement parts.

Punctures, scratches, normal wear and tear and the natural breakdown of colors
and materials over extended time and use are not warranted. Warranty applies to
the USA only.

We will make every effort to replace limited edition or discontinued products but
cannot guarantee availability for replacement.

Any limited edition or discontinued product still under its applicable warranty that
cannot be replaced with an identical product will be replaced with the equivalent
model based on availability.

We may make changes to products and designs in the time you purchased your
product and submitted a warranty claim.

Products repaired or replaced under this warranty may or may not incorporate
these changes.

SUPPORT

For any questions, email us at
support@technofashion.com

FCC ID: 2AZBO-N00009

This device complies with Part 15 of the FCC Rules. Operation is subject to the
following two conditions: (1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that
may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B
digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to
provide reasonable protection against harmful interference in a residential
installation. This device generates, uses, and can radiate radio frequency energy
and, if not installed and used in accordance with the instructions, may cause
harmful interference to radio communications. However, there is no guarantee
that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception,
which can be determined by turning the device off and on, the user is encouraged
to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the
receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for
compliance could void the user's authority to operate the equipment.

NAUTICA

designed, manufactured, distributed by
TECHNOFASHION

© 2021 Technofashion, Inc. All Rights Reserved.
Designed in USA. Made in China.
May be patented. See technofashion.com/patents

